



The Electronic Classroom (EC) consists of these basic units: 1) **Data Projector**; 2) **Computer and Monitor**; 3) **Touch Panel**; and 4) **Equipment Rack** includes: Auxiliary Power, Auxiliary Plate and Cables, Blu-ray/DVD Player, Computer

To Activate System:

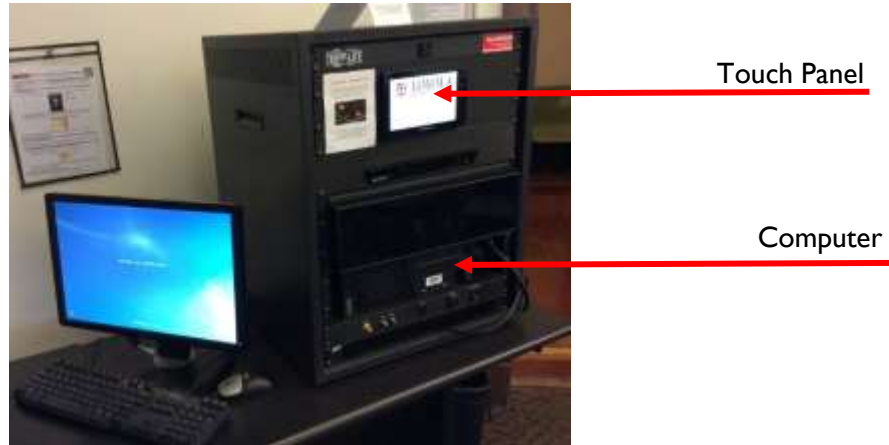


Locate the **Touch Panel** and press the darkened screen. Press the logo and then select the source you wish to use from the scrollable side bar.

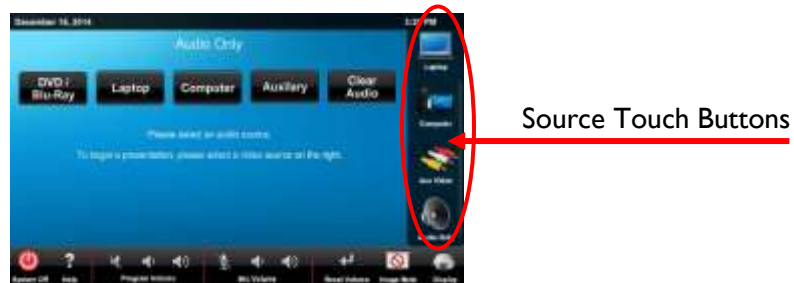

Please note – If the system is not powered down properly you may have to shut down the system first. (Explained below; see **System Shutdown**)

To Display from the Computer Workstation:

1. Turn on the computer and monitor, if not already on.
2. Press the **Computer** button on the Touch Panel.

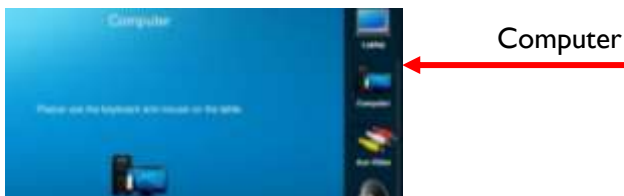

3. If you do not see the computer image (**you may have to wait for Projector to warm up ~1 min**): After waiting a minute, press **COMP** one more time to see if this brings it up.

To Log into a Workstation:

1. At the prompt, hit the Ctrl+Alt+Del keys on the keyboard.
2. Type your Username and Password and hit enter.

To Display a DVD / Blu-ray Video:

1. On the **Touch Panel**, press **Blu-ray** from the Source Select Page.
2. Insert your disc, and use the touch panel controls to play the video.

To Display from your Laptop:

1. Using the VGA with audio or HDMI cables provided to you, connect your laptop.
2. On the **Touch Panel**, press the **Laptop** source button.



3. If you don't see the laptop's image on the screen, toggle the laptop's Function LCD/CRT (Display) button and re-select **Laptop** from the **Source Select** page.

Please Power Down the System Before You Leave the Room

System Shutdown:

Using the Touch Panel, press the **System Off** button, and then press **Shutdown**.

