


The Electronic Classroom (EC) consists of these basic units: 1) **Data Projector**; 2) **Computer** and **Monitor**; 3) **Touch Panel**; and 4) **Equipment Rack** includes: Auxiliary Power, Auxiliary Plate, Computer, Bluray

To Activate System:



Locate the **Touch Panel**; press the darkened screen; then press the logo and select a **Source**.

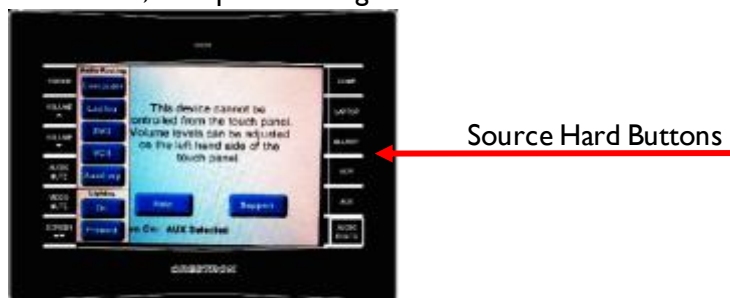

For Audio Only Sources

Select the **Blank** hard button on the right hand side, and then select the audio source you wish to use from the popup.

Please note – If the system is not powered down properly you may have to shutdown the system properly (Explained below; see **System Shutdown**)

To Display from the Computer Workstation:

1. Turn on the computer and monitor, if not already on.
2. Press the **COMP** button on the Touch Panel.
3. If you do not see the computer image (**you may have to wait for Projector to warm up ~1 min**): After waiting a minute, press **COMP** once more.

To Log in to a Workstation:

1. At the prompt, hit the Ctrl+Alt+Del keys on the keyboard.
2. Type your Username and Password and hit enter.

To Display a DVD / Bluray:

1. On the **Touch Panel**, press **Bluray** from the Source Select Page.
2. Insert DVD/Bluray into the player and use the touch panel controls to play the video.

To Use your Laptop Computer:

1. Connect either the laptop's VGA with audio or HDMI output to the Laptop inputs using the **Laptop Cables** on the podium workspace.



2. On the **Touch Panel**, press the **Laptop** button.
3. Select either **VGA** or **HDMI** depending on the cable your laptop is using
4. If you don't see the laptop's image on the screen, toggle the laptop's Function LCD/CRT (Display) button and re-select **Laptop** from the **Source Select** page.

Please Power Down the System Before You Leave the Room

System Shutdown:

Using the Touch Panel, press the **POWER** hard button, and then press **YES**.

