

GoPro Omni Wi-fi pairing setup

To get started, make sure your cameras and remote have a full charge and are powered OFF.


Part 1 - Get your HERO4 primary camera (Camera 1) ready for pairing mode

Power **ON** the primary camera (Camera 1).

Navigate (**Power/Mode** button) and enter the **SETUP** menu (**Shutter** button), navigate (**Power/Mode**) to “Wireless” feature then press the top shutter button to enter the **WIRELESS** menu.



/ Camera Menus

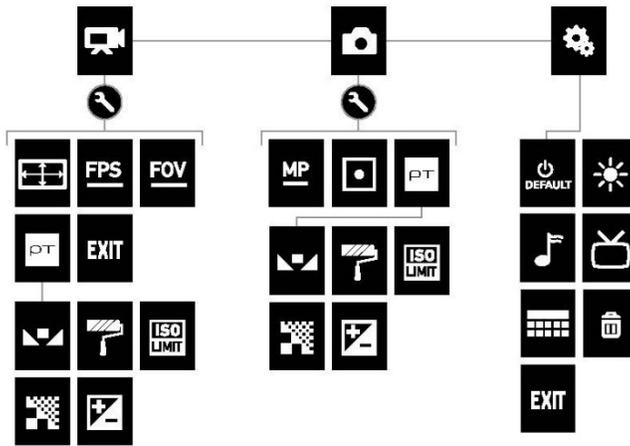

	Beeps
	Color
	Date/Time
	Delete
	Exposure Value Compensation
	Field of View

	FPS Frames Per Second
	Interval
	ISO Limit
	LEDs
	MP Megapixels
	Photo

	Protune
	Setup Mode
	Sharpness
	Spot Meter
	Time Lapse Video
	Video Format

	Video Mode
	Video Resolution
	White Balance
	Wireless

/ Camera Modes

The HERO4 Black features three camera modes. To cycle through the modes, press the **Power/Mode** button [].

	Video	Record video or time lapse video
	Photo	Capture single photos
	Setup	Adjust general camera settings

 
/ Navigating Settings Menus

Each mode has its own settings menu. Follow the instructions below on your camera or the Smart Remote to navigate the settings menus.


For information about connecting the Smart Remote to your HERO4 Black camera, see the *Smart Remote User Guide* at gopro.com/help.

TO NAVIGATE SETTINGS MENUS:

1. Verify that the camera is in the desired camera mode. To cycle between the modes, press the **Power/Mode** button [].
2. Press the **Settings/Tag** button [] to open the settings menu for that mode.
3. Use the **Power/Mode** button [] to cycle through the settings.



 4. Press the **Shutter/Select** button [] to cycle through the options within a setting. To select an option, leave the option highlighted when you move to another screen.



5. To go back to the previous screen or exit the settings menu, press the **Settings/Tag** button [].

In the Wi-Fi menu, press the “**Power/Mode**” button until “**REM CTRL**” is highlighted, and then press the “Shutter” button to select it.

If “**Wireless**” is off (by default), turn it on by press “Shutter” button, then navigate to “Pair” and turn it on. On the next screen you’ll see that the camera is now in Pairing mode for the next 3 minutes.

Now set your camera rig aside and pick up the remote.

Part 2 - Remote pairing steps

Power on the Smart Remote with the **Power/Mode** button.



When the Smart Remote displays a radiating Wi-Fi symbol, press and hold the **Settings/Tag** button on the remote. The remote will show two arrows moving towards each other. You can let go of the remote's **Settings/Tag** button at this time. Now the remote is in pairing mode.

Part 3 - Finish pairing the Remote and Omni rig

At this point, the camera and remote should both show arrows moving towards each other. After one minute or less, the camera and remote should pair.

The remote may ask you to pair another, press the Mode button to highlight "No", then press the red button to select it. Alternatively, you may see the pairing screen (arrows) and the number of connected cameras appear (typically "1"). Press the red shutter button on the Remote to complete the pairing process.

The remote should now mirror the camera's front LCD screen, indicating that pairing was successful.